# Quick Start Guide for Dreamcatcher 2301 (As off: July 5, 2023 by @kenbarbi)

#### IN THE BOX

The new Dreamcatcher (DC) 2301 comes with a Bullseye LNB, but you must provide:

- 1 C-Type USB cable
- 1 USB power cube (2.4 amp device preferred), but you may get by with a smaller unit
- 1 F-type cable with male connectors at both ends
- 1 32 GB or smaller Micro SD Card FAT32 Formatted for file storage

Currently to make the new Dreamcatcher 2301 board work correctly, you MUST reflash the DC and install a 32 GB (or smaller) micro SD Card FAT32 formatted.

#### **REFLASH THE DC PROGRAM**

Every time you reflash a new Firmware Version, you must complete all the next steps.

The DC's operating program was initially flashed to the board at the factory as Firmware Version 1.0.1, and must be re flashed with a July 5, 2023, Firmware Version 1.0.6 which has significant improvements. Follow Syed's guide to do it which is located at <u>https://forums.othernet.is/t/flashing-dreamcatcher-with-firmware-1-0-3/7794</u> on the Othernet Forum - - make sure to make all the specified changes in the Flash program, and also complete resetting the Local WIFI Network.

Here are the instructions for updating the	e firmware on your ESP32-ba	ased Dreamcatche	r.
1. Connect your Dreamcatcher to yo	ur PC with a USB-C data cab	ole.	
Name ^	Date modified	Туре	Size
📕 bin	2/21/2023 4:14 PM	File folder	
🧵 configure	5/9/2023 8:13 PM	File folder	
dl_temp	5/26/2023 10:52 AM	File folder	
doc	5/9/2023 8:13 PM	File folder	
🧵 logs	5/26/2023 10:54 AM	File folder	
🔅 flash_download_tool_3.9.4	5/9/2023 8:13 PM	Application	15,501 KB

5. Select the following parameters for the flashing tool.



6. Uncheck the Lock Setting box.

SPIFlashConfig	9	
SPI SPEED	SPI MODE	
0 40MHz	O QIO	☑ DoNotChgBin
0 26.7MHz	O QOUT	LockSettings
🔿 20MHz	DIO	CombineBin
80MHz	O DOUT	Default

7. Click the ... to navigate to the location of each file. Enter the correct value (such as 0x0) in the following field. Make sure the check boxes to the left of the specified files are checked before you click Start. If you don't do this then nothing is loaded on the board.

bootloader.bin 0x0 dreamcatcher.bin 0x10000 partition-table.bin 0x8000

ESP32S3 FLASH DOWNLOAD TOOL V3.9.4

FactoryMultiDownlo	bad				
Download Path Confi	9		_		,
\\bootloader.l	bin		0	0x0	
✓\\dreamcatch	er.bin		@	0x10000	
\\partition-tal	ble.bin		@	0x8000	
			0		
			0		
			0		
			0		
		***	0		

8. Change the COM port to the available port in the drop-down list.

IDI E		^	PASS:	3	- Brace	
等待		FAIL:		0	clear	
CTADT	CTOD	FRACE	COM:	COM22		
START STOP	EKASE	BAUD:	115200			

9. Click START. After the green box turns blue and shows FINISH, unplug the Dreamcatcher and connect it to your LNB and power supply.

FINISH	AP: 3485188DFD15 STA: 3485188DFD14		^	PASS:	4			
ㅎtt				FAIL:	0	clear		
5000 BT: 3485188		DFD16			<u> </u>			
START	STOP	ERASE				COM:	COM23	
JIAN	5101			BAUD:	115200			

### **INSERT THE FAT32 FORMATTED MICRO SD CARD**

Currently the DC 2301 requires the Micro SD Card to function. Then power up the DC.

## CONNECT TO DC DASHBOARD THRU UNIT'S WIFI HOTSPOT

Open your computer's Wifi panel and connect to Othernet with password othernet

Then use your browser to open the DC Dashboard by going to 192.168.4.1 where you will see this screen (when connected to a satellite). Otherwise, the Dashboard will not have SNR or RSSI values. At this point, the DC's IP address will show as 168.192.4.1

Welcome to Othernet A BROADCAST FOR THE DIGITAL AG			
		-	AND A CON
Device Information Herbere 202301 Firmwar Winkes 1.0.3 IP Addrese 192.168.4.1	Merricry Status Free Heap 163,89 XB Min Free heap 153,14 XB Free Sham 7957,11 KB	SD Cand Status Capacity 60891.08.M8 Free 60891.02.M8 Used 0.06.M8	14%
LINB Statup LINB enabled YES LINB intrage YES LINB acrosocted YES LINB voltage 14.0 FREQ offset 0	Receiver Status 5 1948	Receiver Stats 855 - 91 Padets Boewerd - 371 CRC Linos - 0 Header Tinos - 0 Bonke - 2673	Realtinge -re
File Info Name			

If you have not connected to the US or European satellite, follow standard practices to do that.

### CONNECT TO YOUR LOCAL WIFI NETWORK

In the Settings pull-down menu you can change the Wifi Client to your own router.



Enter your Wifi's name and password - - then click **Save**. The newly assigned IP address will now appear on the Dashboard after you refresh your browser



If you were to go back to the AP Client tab, it would appear unchanged, but in fact it did change. Make sure when your router assigns an IP address to the DC 2301, that you make sure it stays Manually assigned and not randomized by your router's DCHP protocol.

You will also find the DC 2301 does not turn off the Othernet Wifi hotspot, but keeps it up so you can access the DC when out of range of your local Wifi.

Wifi Clien	it			
SSID / Nam	1e			
Password				
Enable Tele	emetry			
Save	Cancel			